



Rear Cable – Handbrake – Replace (12 675 0)

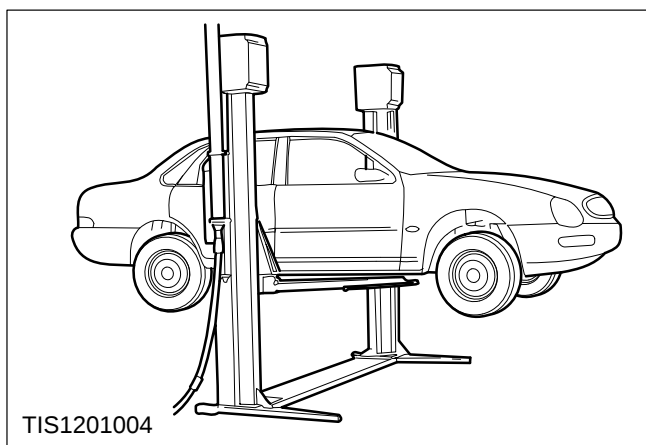


Remove

1. **Slacken the wheel nuts, raise the vehicle and remove the rear road wheels.**

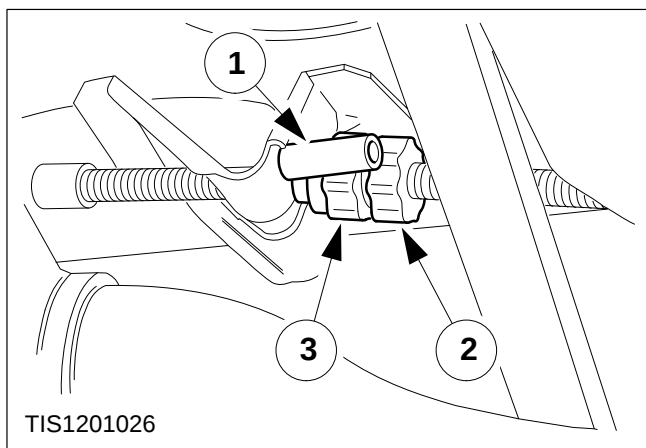


2. **De-adjust the handbrake cable.**

- 1 Remove the locking pin.
- 2 Slacken the adjuster locknut.
- 3 Slacken the adjuster until the levers on the calipers have returned to their stops.

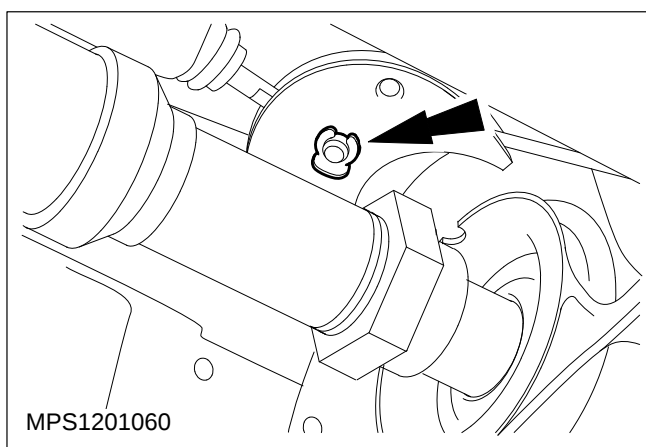


3. **Disconnect the handbrake cable from the equaliser yoke.**

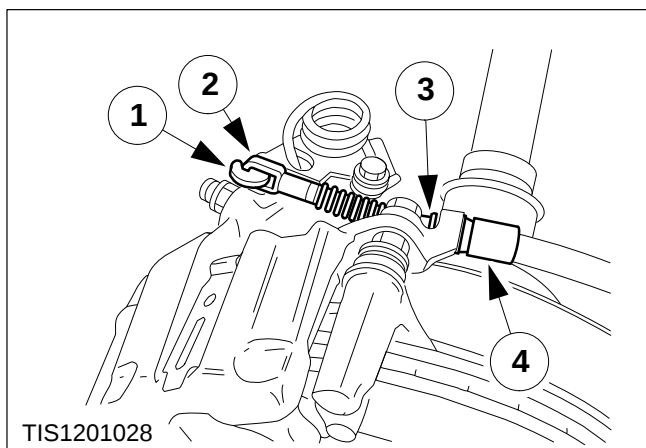


4. Disconnect the handbrake cable from the calipers.

- 1 Pull back the caliper levers.
- 2 Unhook the handbrake cables from the caliper levers.
- 3 Remove the handbrake cable retaining clips.
- 4 Detach the handbrake cables from the calipers.

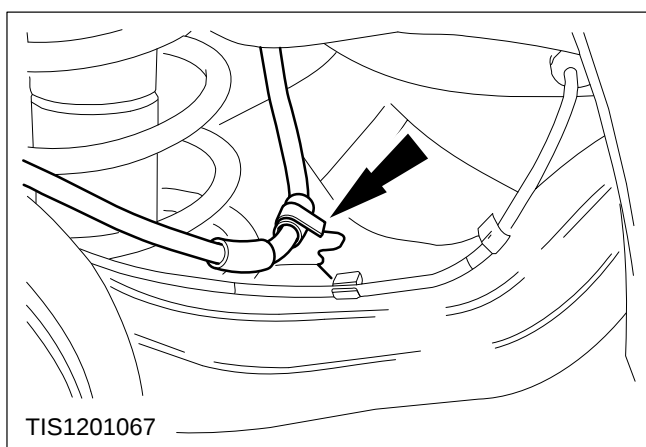


5. Detach the handbrake cable from the lower arms.

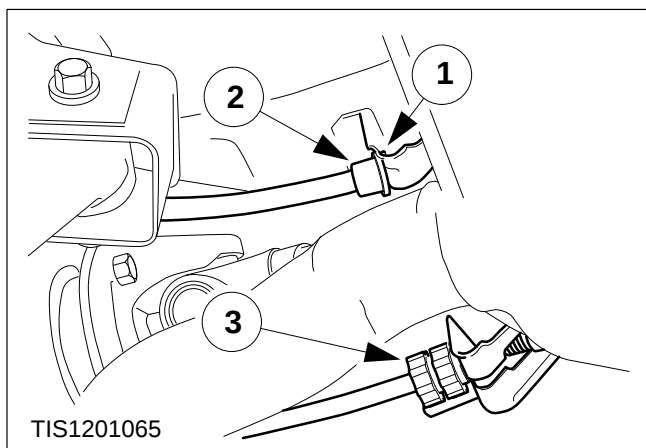

6. Remove the handbrake cable from the body fixings.

- 1 Remove the circlip securing the non adjuster side of the cable.
- 2 Remove the non adjuster side of the cable.
- 3 Remove the adjuster side of the cable.

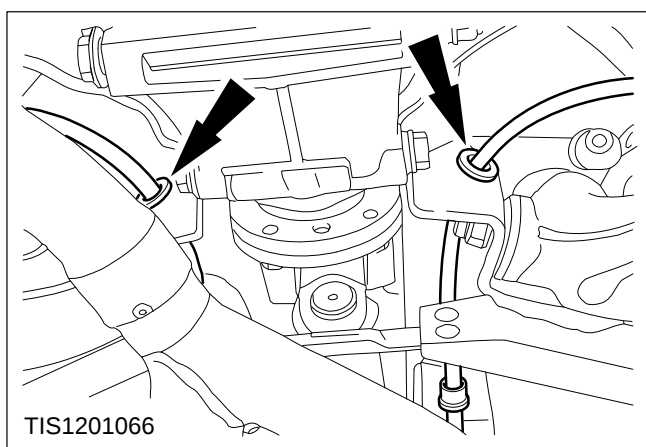

7. Pull the cables through the rear axle and remove the cables.

Install

8. Relocate the cable.

Ensure that the cable is routed correctly.

9. Refit the cable to the body fixings.

10. Reconnect the handbrake cable to the caliper assembly.

11. Reconnect the handbrake cable to the equaliser yoke.

12. Adjust the handbrake as described in Operation No. 12 662 0.

13. Refit the road wheels and lower the vehicle.

