

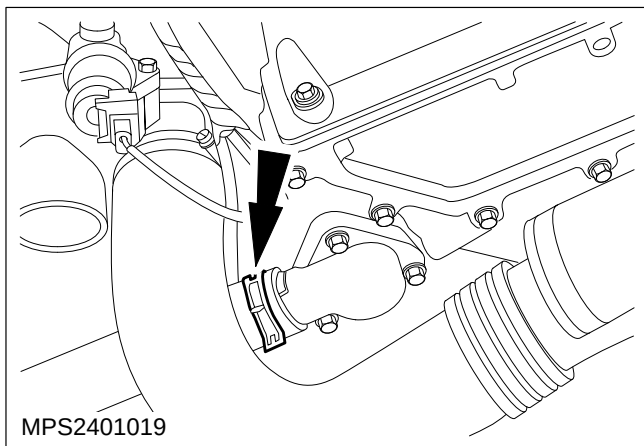


Thermostat (DOHC Variants) – Remove and Install (24 454 0)**Remove**

- 1. Drain the cooling system (refer to Operation Number 24 122 0).**
- 2. Remove the air pipe.**

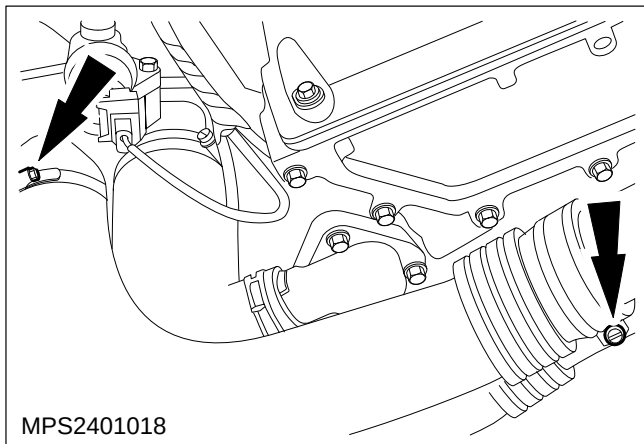

- 3. Detach the hose from the water outlet.**

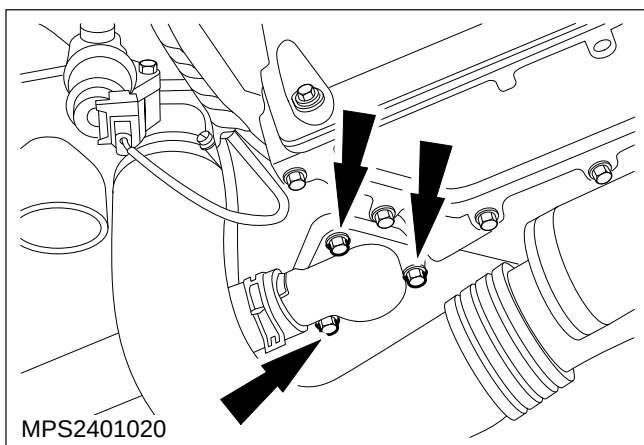


- 4. Remove the thermostat.**

Thermostat – Test (Thermostat Removed) (24 451 1)


5. **Suspended the thermostat in water in a suitable container.**

Ensure the thermostat does not touch the sides of the container.

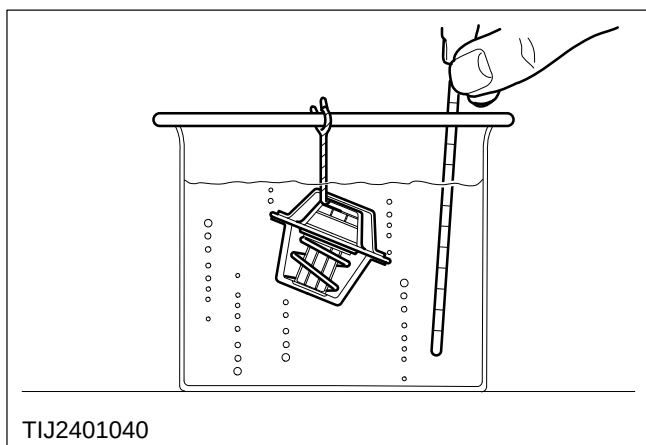

6. **Gradually heat the water frequently checking the temperature with an accurate thermometer.**

If the thermostat function is incorrect fit a new thermostat.

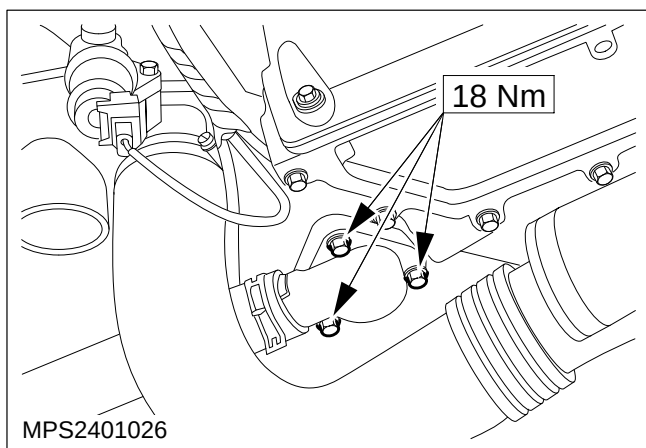

Install

7. **Refit the components in reverse order.**

Ensure the seal is fitted correctly.

8. **Refill the cooling system and check for leaks (refer to Operation Number 24 122 0).**