



Water Pump Assembly (V6 24V Variants) – Remove and Install (24 404 0)**Remove**


1. Raise the vehicle and remove the undershield.
2. Drain the cooling system (refer to Operation Number 24 122 0).
3. Remove the alternator/water pump drive belt (refer to Operation Number 31 413 0).
4. Remove the lower water pump hose.

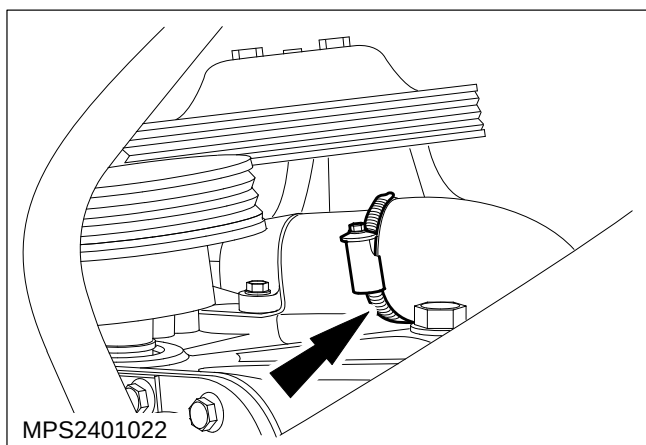


5. Remove the four lower water pump retaining bolts.
6. Lower the vehicle.

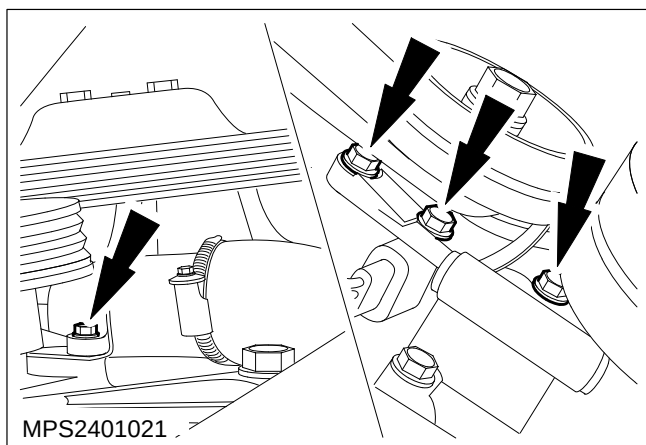

7. Remove the air box (refer to Operation Number 23 174 0).

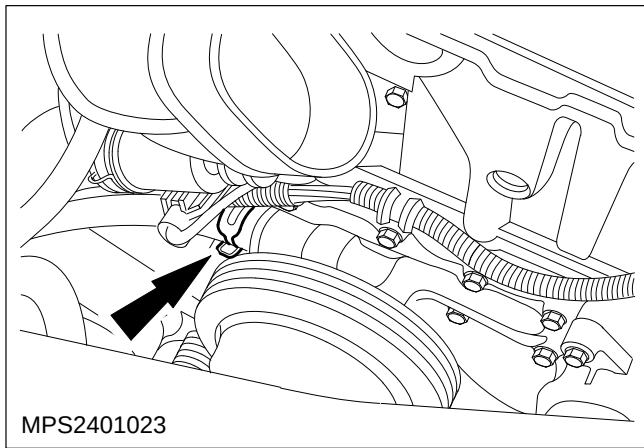


8. Remove the upper water pump hose.

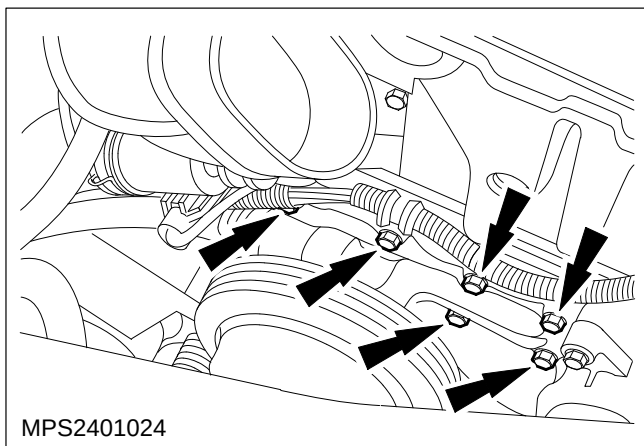


9. Remove the water pump.


Remove the six remaining retaining bolts.

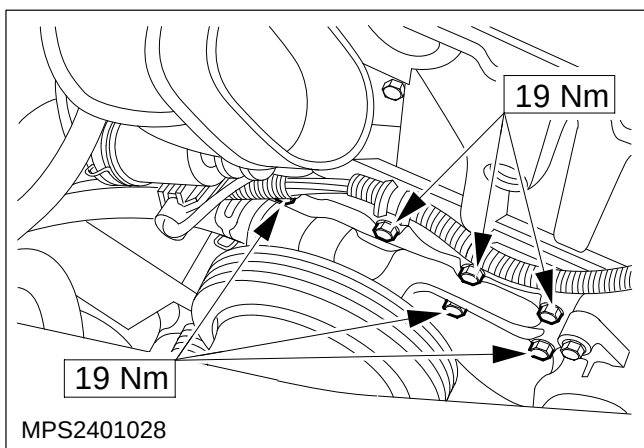

Install

10. Refit the components in reverse order.

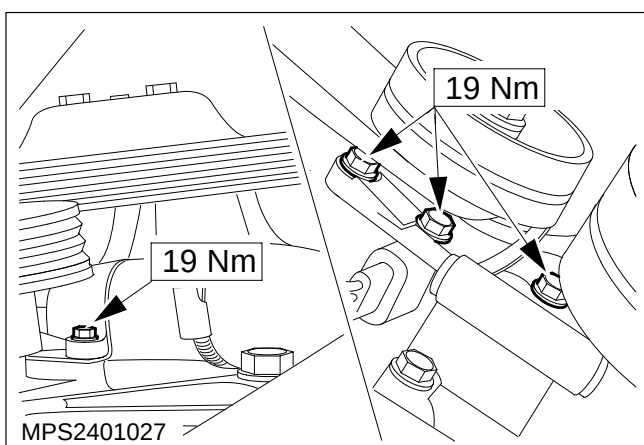

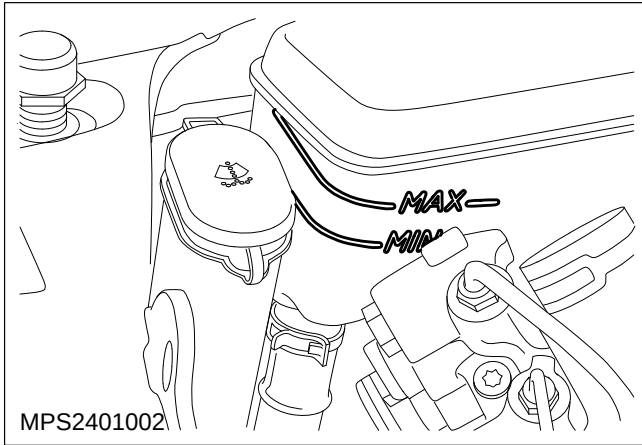

11. Refill the cooling system and check for leaks (refer to Operation Number 24 122 0).