


Water Pump Assembly (DOHC Variants) – Remove and Install (24 404 0)


Remove

1. Raise the vehicle and remove the undershield.
2. Drain the cooling system (refer to Operation Number 24 122 0).
3. Remove the alternator/water pump drive belt (refer to Operation Number 31 413 0).

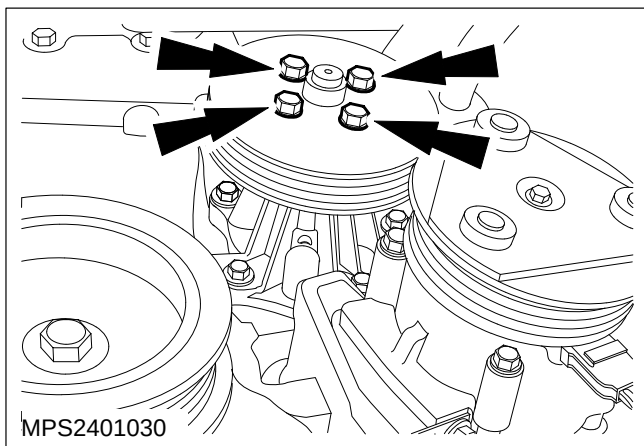


4. Remove the water pump pulley.

It is necessary to hold the water pump pulley using a suitable strap wrench to prevent rotation.

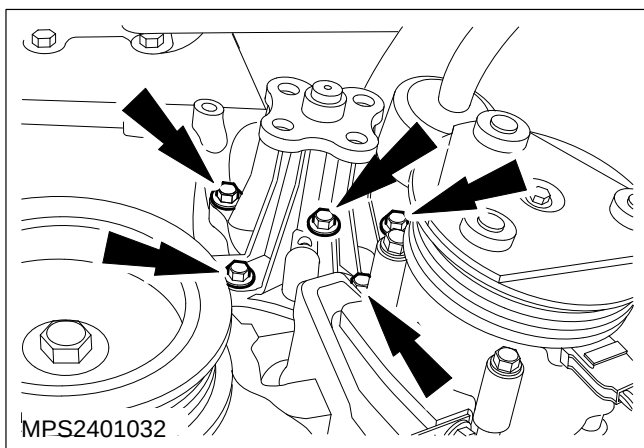


5. Remove the water pump assembly.

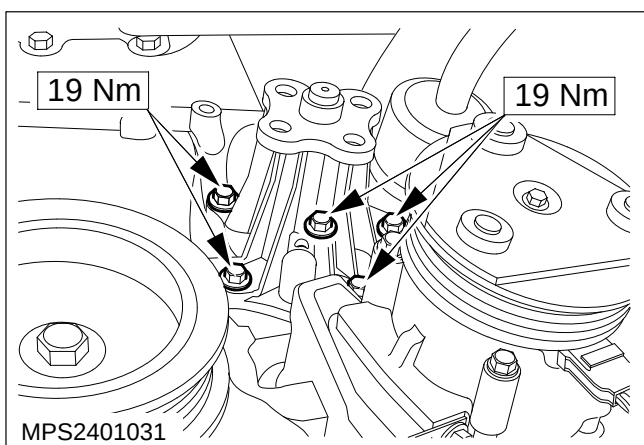

Install

6. Refit the components in reverse order.
Ensure the rubber seal is correctly located.

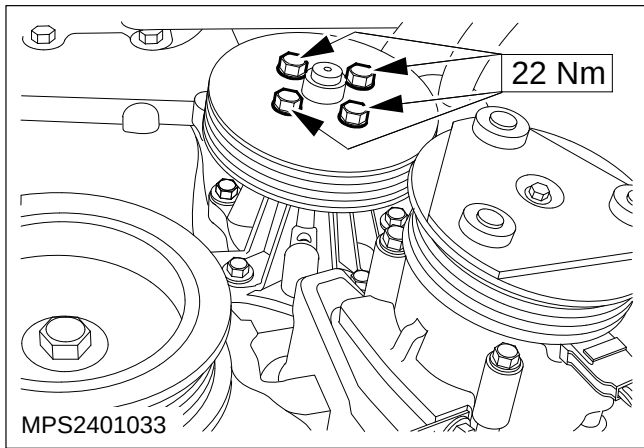

7. Refill the cooling system and check for leaks (refer to Operation Number 24 122 0).

