

Sender Unit – Fuel Tank – Remove and Install (33 286 0)

For the removal and installation procedure for the fuel tank sender unit (refer to Operation Number 23 534 0).