

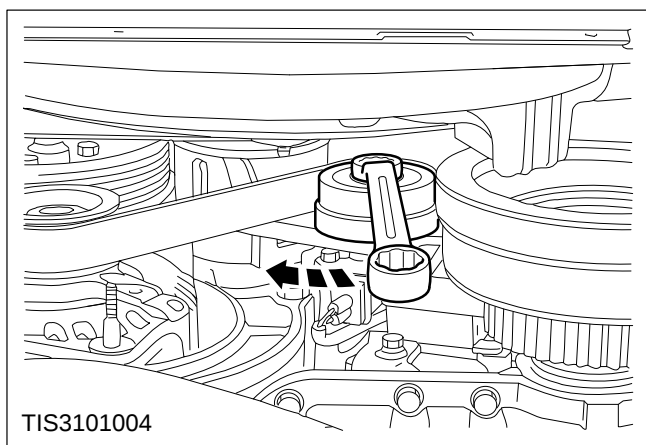
Drive Belt – Alternator (DOHC 8V and 16V) – Remove And Install (31 413 0)**Remove**

CAUTION: Disconnect the battery negative lead.

- 1. Remove the air conditioning drive belt (if fitted).**

- 2. Remove the alternator drive belt.**

Reduce the tension on the belt by turning the tensioner clockwise.

**Install**

- 3. Fit the alternator drive belt.**

- Turn the tensioner clockwise.
- Ensure the drive belt is correctly aligned with the pulleys and release the tensioner.