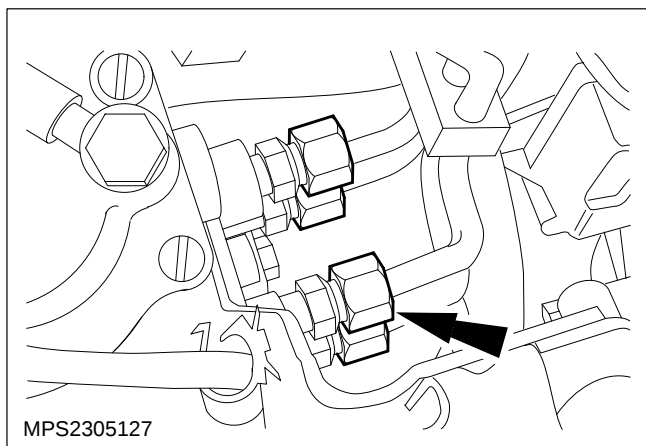


Delivery Pipes – Fuel Injector – Remove And Install (23 483 0)


⚠ WARNING: This procedure involves fuel handling. Be prepared for fuel spillage at all times and always observe fuel handling precautions. Failure to follow these instructions can result in personal injury.


⚠ CAUTION: Diesel fuel injection equipment is manufactured to very precise tolerances and fine clearances. It is therefore essential that absolute cleanliness is observed when working with these components. Always fit blanking plugs to any open orifices or pipes.

**Remove**

⚠ CAUTION: Disconnect the battery negative lead.

- 1. Disconnect the fuel injector delivery pipes from the fuel injection pump (four unions).**
- 2. Disconnect the fuel injector delivery pipes from the fuel injectors (four unions).**

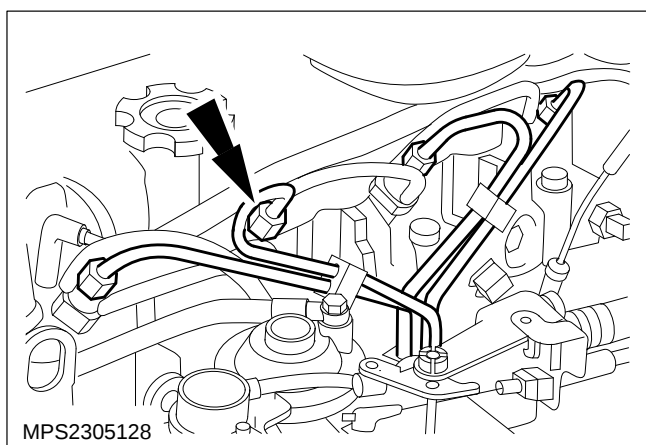

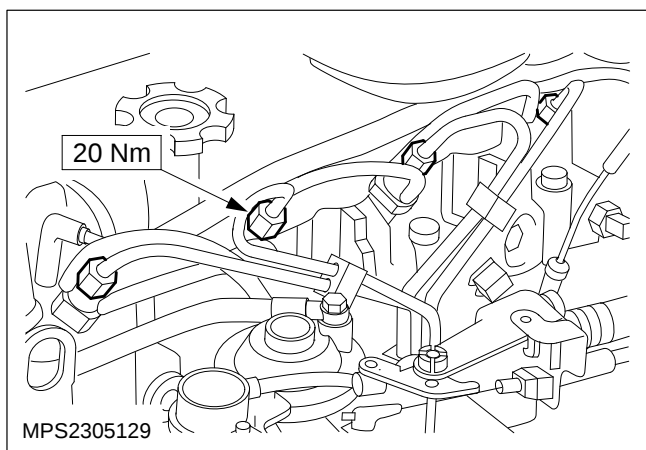

Install

3. Refit the components in the reverse order.

- Loosely assemble the delivery pipe unions to both the fuel injectors and the fuel injection pump before fully tightening.

