



Element – Air Cleaner (Diesel Variants up to 97¼ MY) – Remove And Install (23 184 0)

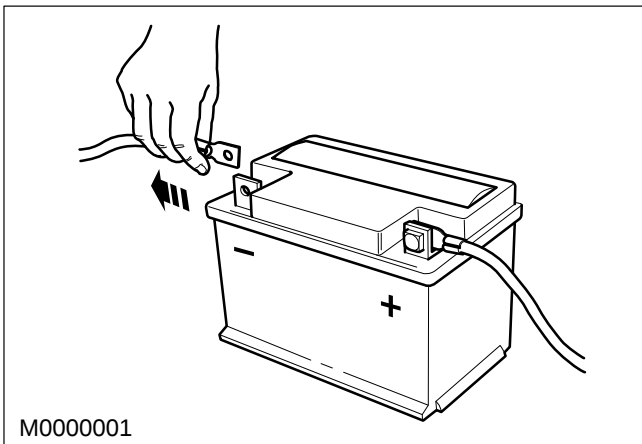


Remove


1. Disconnect the battery earth lead.

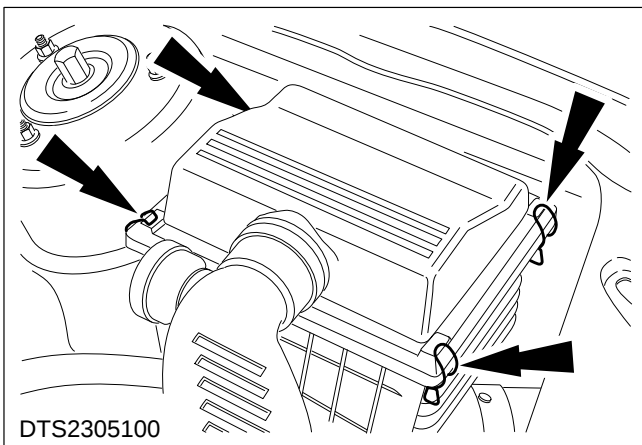

2. Release the air cleaner upper housing retaining clips.

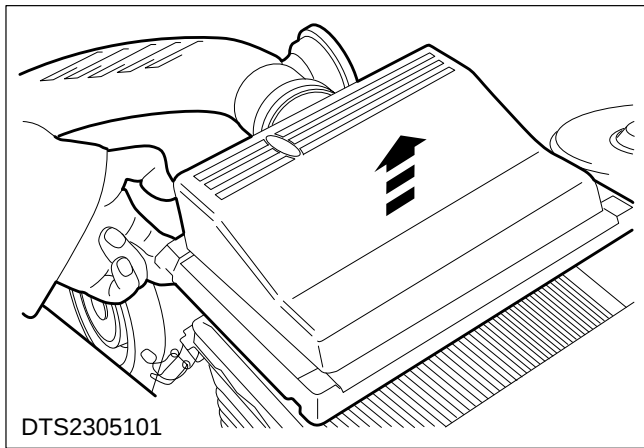

3. Carefully lift the air cleaner upper housing.

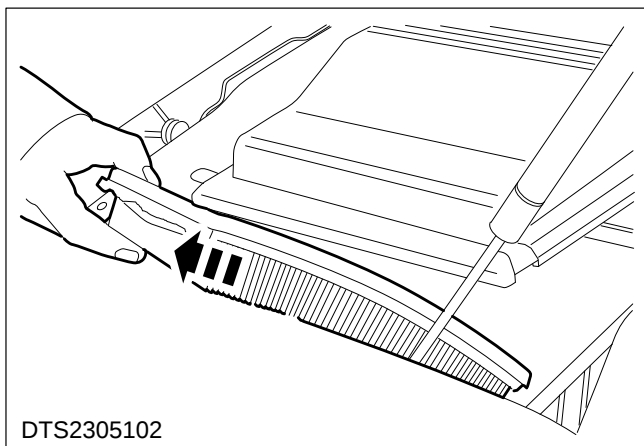

4. Remove the air cleaner element.

Install

5. Refit the components in reverse order.

Always use a new air cleaner element; do not attempt to clean the old one.