
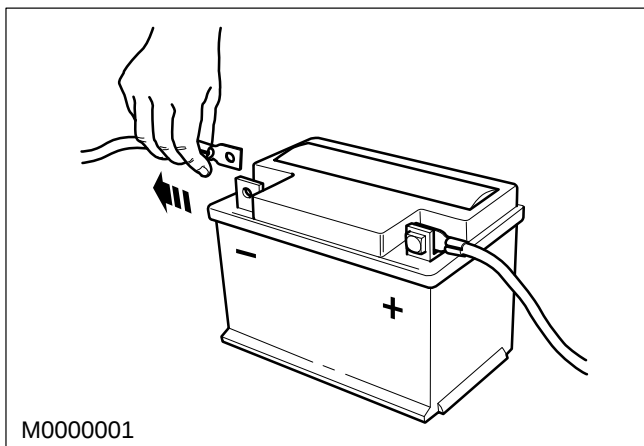



Air Cleaner Assembly (V6 24V Variants) – Remove and Install (23 174 0)**Remove**

1. **Disconnect the battery earth lead.**

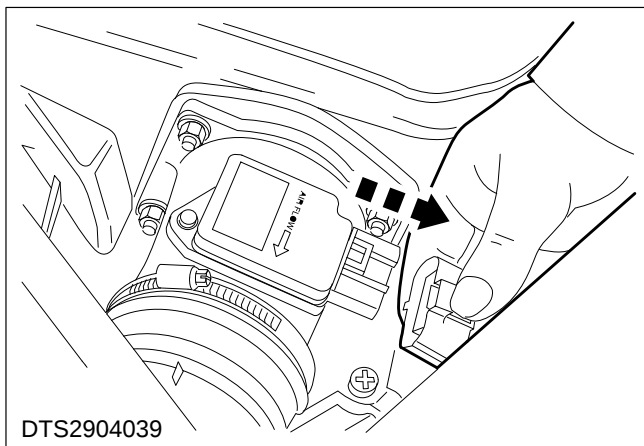


CAUTION: Do not pull on the wiring; pull on the multiplug body.


2. **Disconnect the MAF sensor multiplug.**

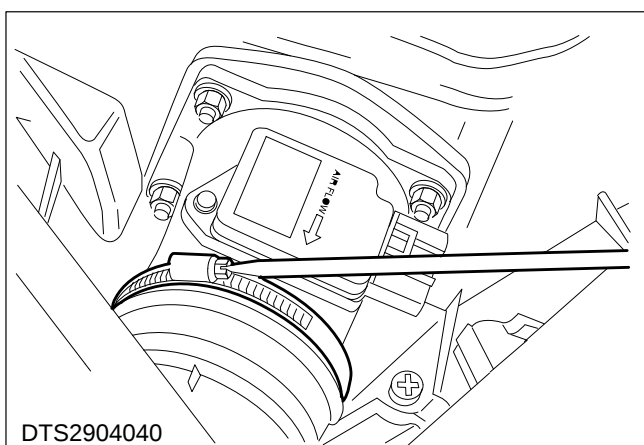


3. **Slacken the clip and disconnect the intake hose.**

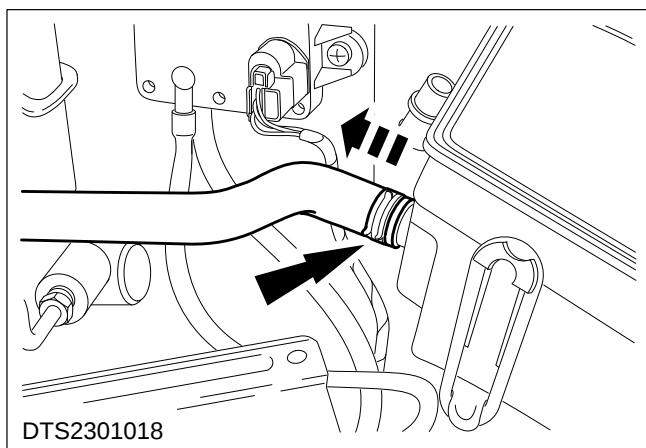


- 4. Open the clip and disconnect the breather hose.**

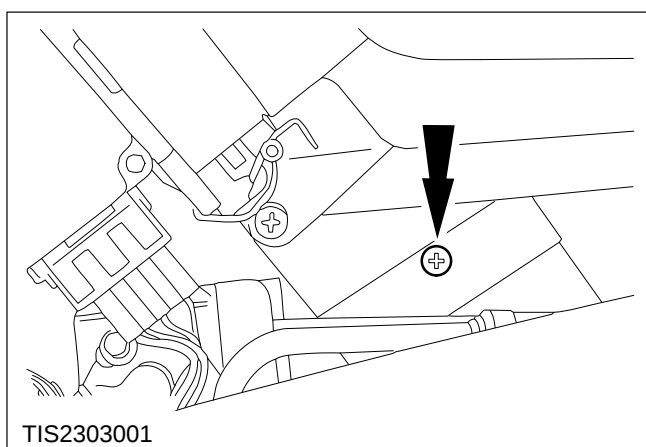


- 5. Unscrew the intake pipe retaining screw.**

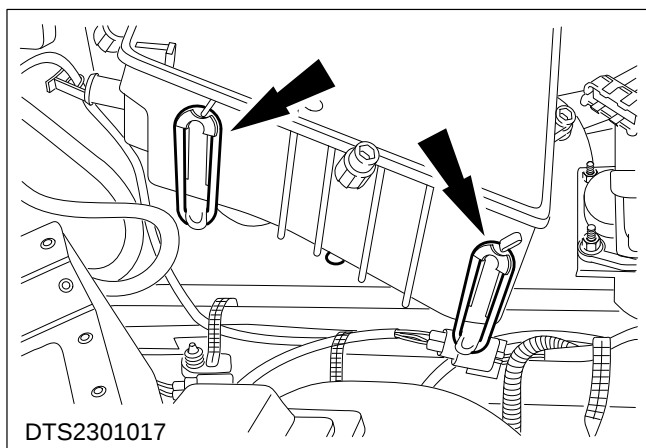


- 6. Unclip the air cleaner assembly retaining bands.**

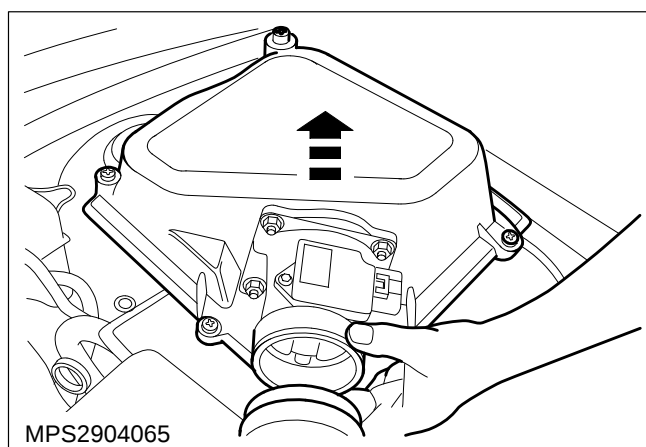


- 7. Remove the air cleaner/MAF sensor assembly.**

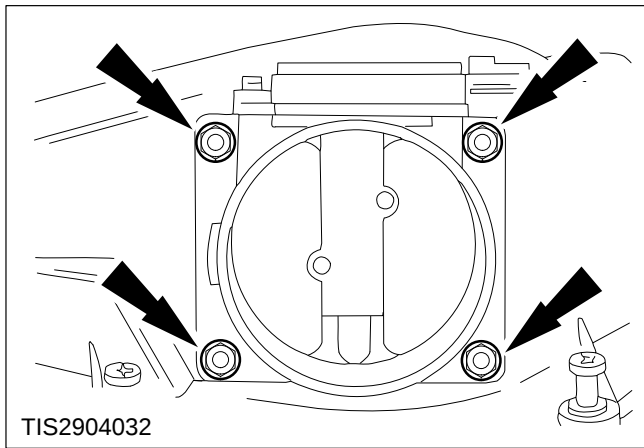

8. Unscrew the MAF sensor retaining nuts.

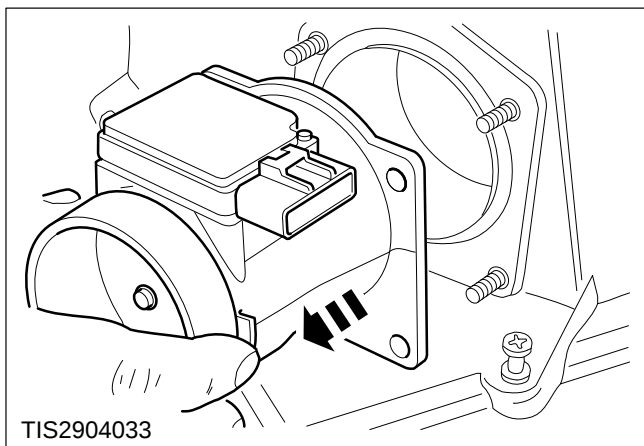

9. Remove the MAF sensor from the air cleaner assembly.

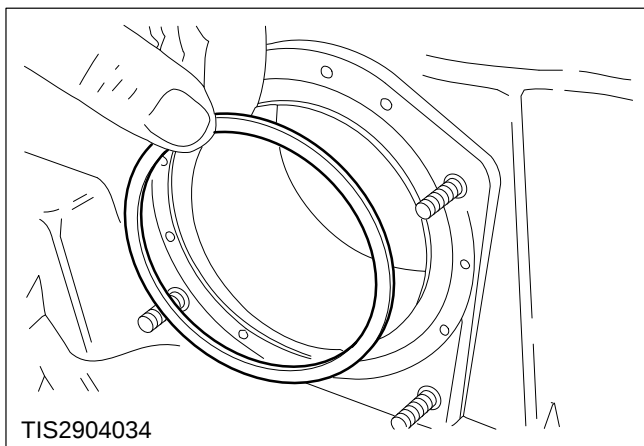

Install

10. Refit the components in reverse order.

Always use a new MAF sensor sealing ring; do not attempt to use the old one.