

Switch - Fuel Shut Off - Remove and Install (33 577 0)

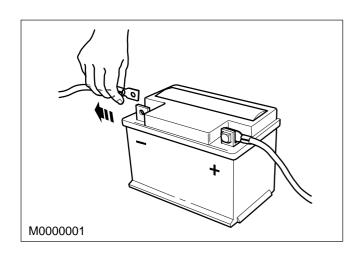


Remove


1. Disconnect the battery earth lead.

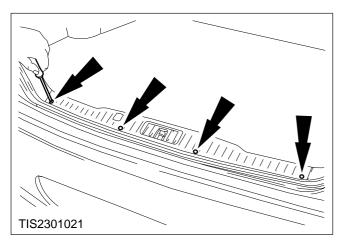


2. Unscrew the trim panel retaining screws.

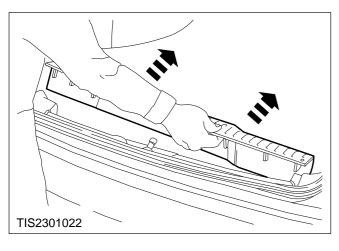


3. Remove the trim panel.

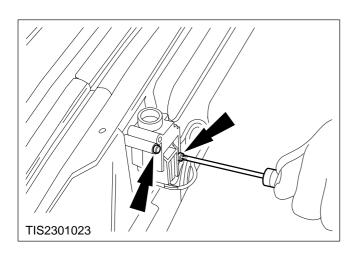

4. Unscrew the fuel shut off switch retaining screws.

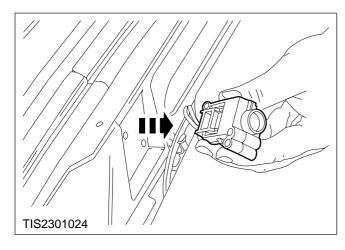

5. Remove the fuel shut off switch from the rear panel.

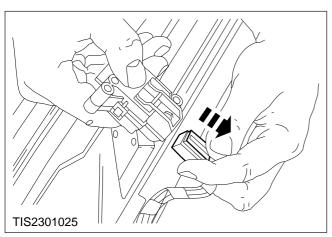

CAUTION: Do not pull on the wiring; pull on the multiplug body.

6. Disconnect the multiplug and remove the fuel shut off switch.

Install

7. Refit the components in reverse order.