


## Panel – Cowl Side Trim (Rear) – Remove and Install (43 735 0)

### Remove

1. Remove the upper and lower B – pillar trim panels (refer to Operation Number 43 617 0).


2. Remove the rear retaining screw.

Displace the rear seat bolster to reveal the screw.

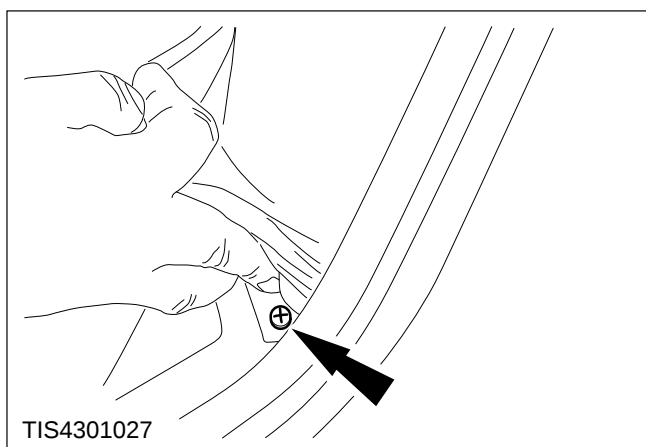

3. Remove the cowl side trim.

Locally detach the door weatherstrip.

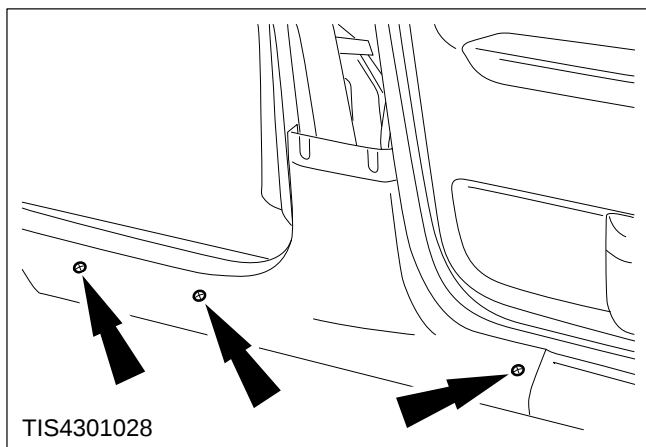

### Install

4. Refit the components in reverse order.