
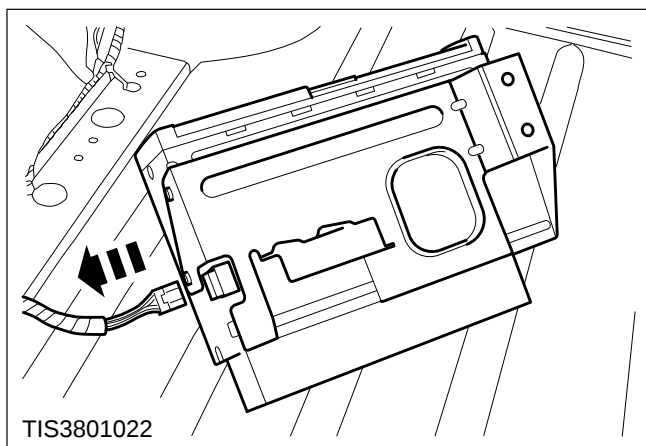


Autochanger – CD Player – Remove and Install (Wagon) (38 446 0)


Remove

1. Remove the load space trim panel (refer to Operation Number 43 746 0).
2. Remove the radio loudspeaker (refer to Operation Number 38 284 0).
3. Detach the unit (four screws).

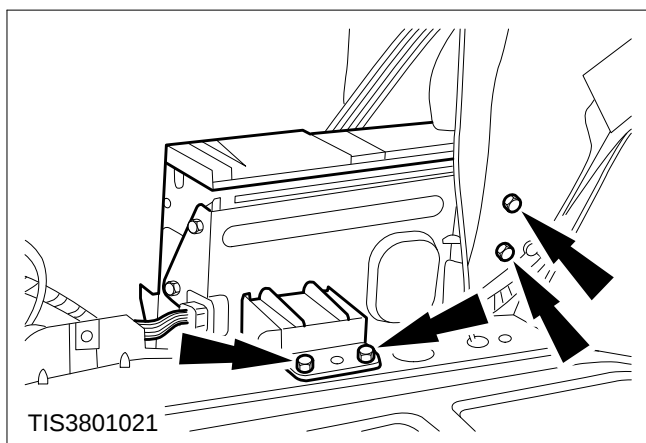

⚠ CAUTION: When disconnecting the multiplugs do not pull on the wiring; pull on the multiplug body.

4. Disconnect the multiplug and remove the unit.

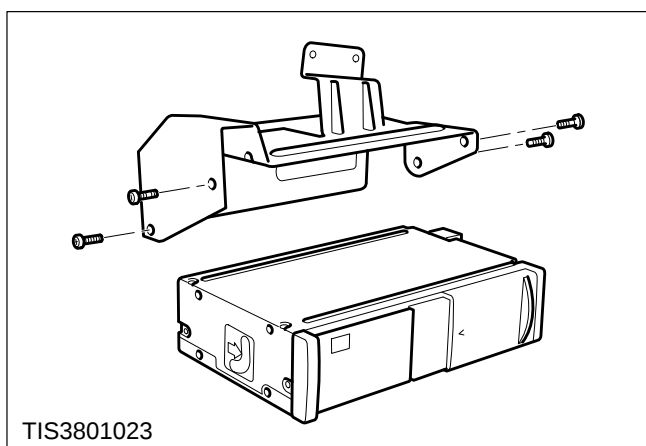

5. Remove the bracket (four screws).

Install

6. Refit the components in reverse order.