



Control – Remote – In-Car Entertainment – Remove and Install (38 471 0)**Remove**

⚠ CAUTION: Disconnect the battery negative lead.


1. Remove the upper steering column shroud (two screws) (steering wheel shown removed for clarity).

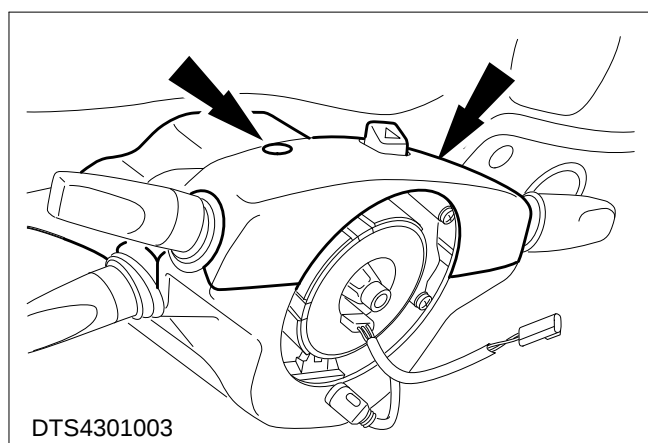


2. Remove the lower steering column shroud (three screws) (steering wheel shown removed for clarity).

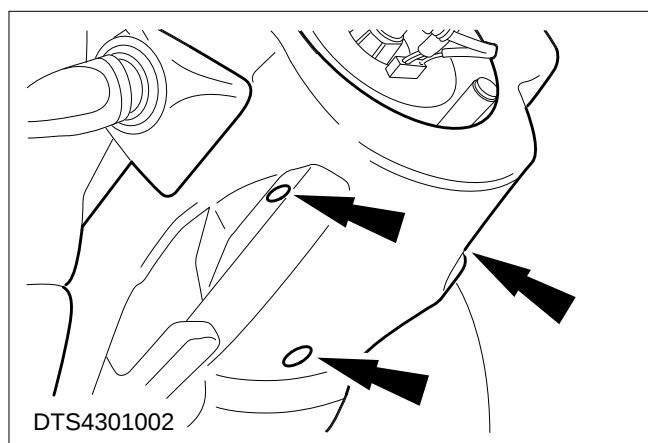

3. Depress the locking mechanism and lift off the remote control stalk (steering wheel shown removed for clarity).

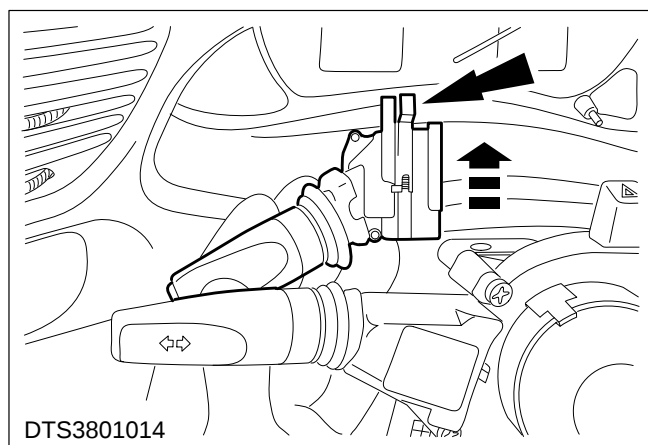

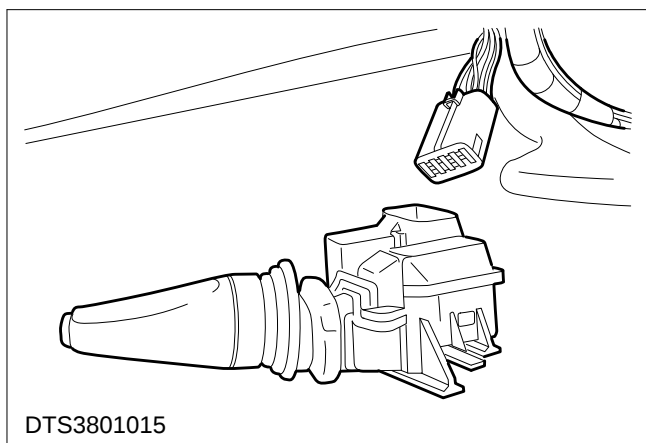

⚠ CAUTION: When disconnecting the multiplugs do not pull on the wiring; pull on the multiplug body.

4. Disconnect the multiplug and remove the remote control stalk.

Install

5. Refit the components in reverse order.