



Regulator Assembly – Door Window (Rear) – Remove and Install (42 338 0)

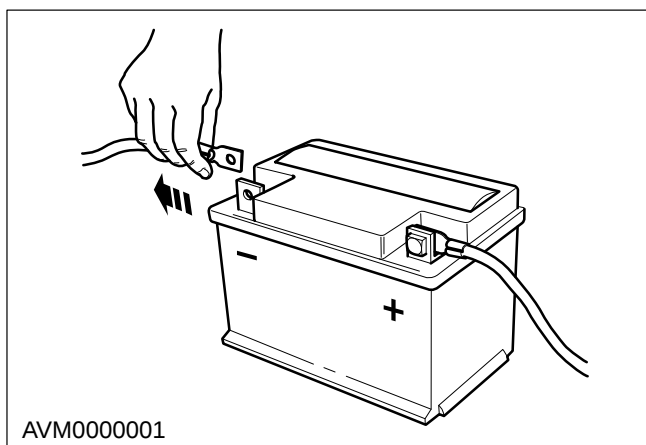


Remove


1. Disconnect the battery negative lead.
2. Remove the door trim panel (refer to Operation Number 43 706 0).
3. Remove the door window glass (refer to Operation Number 42 315 0).

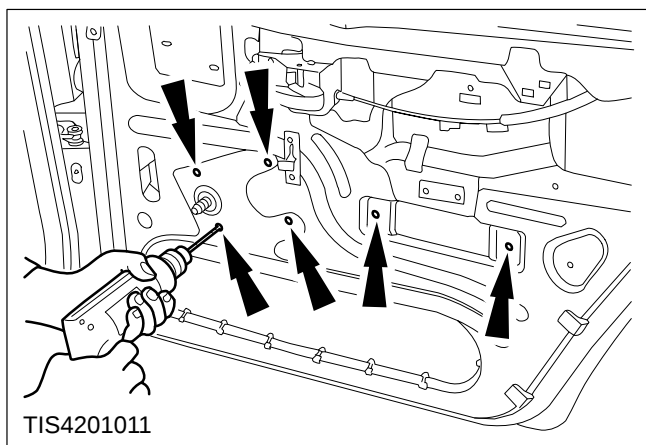

4. Remove the regulator assembly.
 - Drill out six rivets.
 - Disconnect the motor multiplug (where fitted).

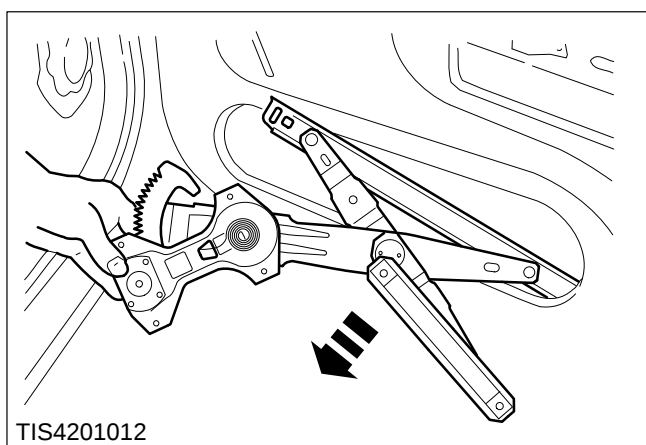

5. Remove the regulator assembly (continued).

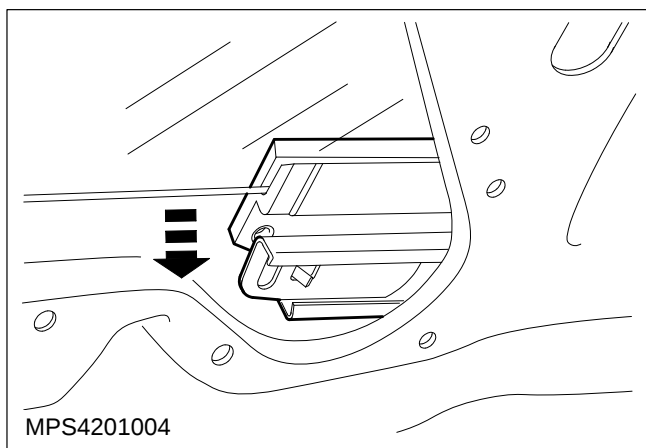

Install

⚠ CAUTION: Ensure the window bracket is correctly seated onto the regulator before fully tightening the fixing screws.

6. Refit the components in reverse order.