
## Thermostat (V6 24V Variants) – Remove and Install (24 454 0)

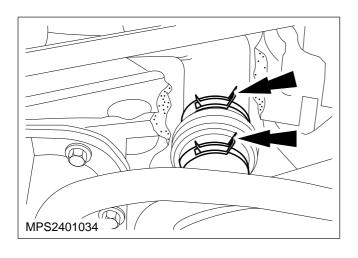

## Remove

- 1. Raise the vehicle.
- 2. Drain the cooling system (refer to Operation Number 24 122 0).
- 3. Disconnect the hoses and pull out the thermostat.

## Install

- 4. Refit the thermostat in the hoses and secure with hose clips.
- 5. Refit the undershield and lower the vehicle.
- 6. Refill the cooling system and check for leaks.

