

## Vent - Face Level - (centre) - Remove and Install (34 489 0)

## Remove

- 1. Standard preparatory measures:
  - Make a note of the radio keycode.
- Make a note of the preset radio stations.



- 2. Remove the instrument cluster bezel as described in Operation Number. 34 354 0.
- 3. Remove the centre face level vent.

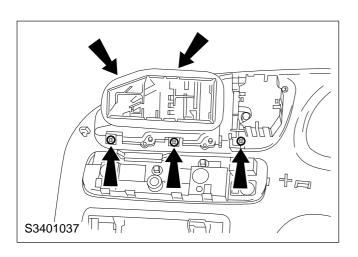

## Install

- 4. Refit the components in the reverse order.
- 5. Standard finishing operations:
  - Connect the battery negative lead.
  - Enter the radio keycode.
  - Remove the protective covers.
  - Reprogramme the preset radio stations.
  - · Reset the clock.
  - Road test the vehicle to collect data for the PCM.